



#### WHAT'S IN THE BOX

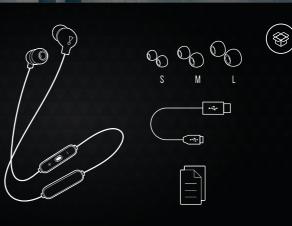

HOW TO WEAR

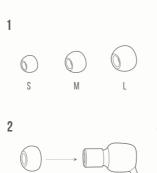










### BUTTON COMMAND

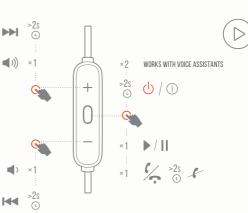


# MULTI-POINT CONNECTION

ENTER PAIRING MODE WITH THE 2<sup>ND</sup> DEVIC

- \* (MAXIMUM 2 DEVICES)
- TO SWITCH MUSIC SOURCE, PAUSE THE MUSIC ON THE CURRENT DEVICE AND SELECT PLAY ON THE 2<sup>ND</sup> DEVICE.

2 PHONE CALL WILL ALWAYS TAKE PRIORITY.

- 3 IF ONE DEVICE GOES OUT OF BLUETOOTH RANGE OR POWERS OFF, YOU MAY NEED TO MANUALLY RECONNECT THE REMAINING DEVICE.
- 4 SELECT "FORGET THIS DEVICE" ON YOUR BLUETOOTH DEVICES TO DISCONNECT MULTI-POINT.

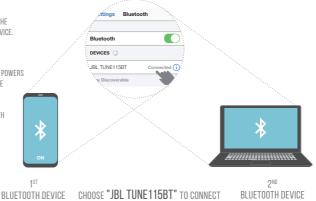


BLUETOOTH DEVICE

## CHARGING



### LED Behaviors

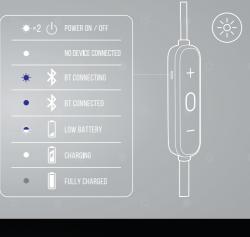

TECH SPEC

DRIVER SIZE:
FREQUENCY RESPONSE:
SENSITIVITY:
MICROPHONE SENSITIVITY:
IMPEDANCE:
BLUETOOTH TRANSMITTED POWER:
BLUETOOTH FRANSMITTED MODULATION:
BLUETOOTH PROFILE VERSION:
BLUETOOTH PROFILE VERSION:
BLUETOOTH VERSION:
HEADIST BATTERY TYPE:
POWER SUPPLY:
CHARGING TIME:
MUSIC PLAYTIME WITH BT ON:
WEIGHT:

8.6 mm dynamic driver
20 Hz - 20 kHz
102 dB SPL@1kHz 1mW
- 25 dBV/Pa @1kHz
16 ohm
<5 dBm
6FSK/00PSK/80PSK
2.402 GHz - 2.480 GHz
HFP V1.6, HSP V1.2, AVRCP V1.5, A20P V1.2
4.2
LITHIM-10N BATTERY (3.7 V/160 mAh)
5 V --- 1 A
<2 hrs
8 hrs
19.02 g